



Important - First Step Instructions For Installation

TempaGeR

TempaGeR 3E Installation (Quick Start)

Installation of the TempaGeR 3E ID Box can be accomplished quickly and easily. Upon arrival, the TempaGeR ID Box will be set to obtain an IP address automatically using DHCP or AutoIP. It is important to ensure that you have extra IP addresses available on your network that can be assigned to the TempaGeR ID Box. If you do not have DHCP on your network, the AVTECH Device Discovery Utility will still detect the TempaGeR ID Box at which point you should assign a static IP address.

Hardware

To connect the TempaGeR ID Box to the network, plug one end of the provided Ethernet cable into the 'Network' port on the TempaGeR ID Box and the other end into the network. Next, plug the AVTECH power adapter into the 'Power' plug of the TempaGeR ID Box and ensure that it is connected to an active Main or UPS power source. The green LED located next to the Ethernet port will light up indicating that the TempaGeR ID Box is powered on.

Discovery

Install the AVTECH Device Discovery Utility available for download under 'TempaGeR Software Downloads' in the 'Downloads' section of the AVTECH.com website. After filling in the form fields provided, click the 'Download' button, select the 'TempaGeR Ethernet' option, and click the 'AVTECH Device Discovery' link. Click the 'Start Installer For Windows' button to download and install the AVTECH Device Discovery Utility.

Open the AVTECH Device Discovery Utility and click the 'Search' button. The TempaGeR ID Box will appear with the name 'TempaGeR-<5-digit number>'. The 5-digit number will correspond with the 5-digit serial number on the TempaGeR ID Box. Once the TempaGeR ID Box has been discovered, a static IP address can optionally be assigned. AVTECH Strongly Recommends that a static IP address be assigned to the TempaGeR ID Box. To set a static IP address, click the 'Set IP' button on the AVTECH Device Discovery Utility. **BE SURE that the IP address assigned is outside of the DHCP IP range of your network although within the range allowed by your Subnet Mask. Please contact your Network Administrator if you need assistance.**

Setup

Once the TempaGeR ID Box has been detected, the web server interface for the TempaGeR ID Box can be viewed by typing 'http://<IP address>' in your web browser. Make sure to replace <IP address> with the IP address of the TempaGeR ID Box. You can also use the AVTECH Device Discovery Utility to open the web server interface for the TempaGeR ID Box. To do so, open the AVTECH Device Discovery Utility and click 'Search'. Select the desired TempaGeR ID Box and click the 'Web' button or the 'Settings' button. Clicking the 'Web' button will load the 'Status' section of the TempaGeR web server interface where digital temperature sensor status can be viewed. Clicking the 'Settings' button will load the 'Settings' section of the TempaGeR web server interface where the different configurable settings of the TempaGeR ID Box can be modified. For more information about the TempaGeR web server interface, please refer to the *'TempaGeR 3E User's Guide & Reference Manual'*.